

## **AIS Survivor Recovery System**

The revolutionary new SafeLink R10 SRS (Survivor Recovery System) is the first of its kind, a personal AIS (Automatic Identification System) device to assist in survivor recovery. It is lightweight and compact, designed for and intended to be carried by all crew members.

- Provides accurate position information to assist fast recovery of individuals in difficulties at sea
- Transmits GPS target tracking information over AIS
- Compatible with plotters and onboard navigation systems<sup>†</sup> to assist fast location and retrieval
- Small and lightweight for mounting on lifejacket
- Unique serialized ID
- LED flashing indicator
- Buzzer
- Minimum 24 hour continuous operation
- 7 year battery life

#### Safelink R10 SRS SPECIFICATIONS

ENVIRONMENTAL Exterior finish Hi impact ABS/PC Yellow Sealing depth Immersion to 5m (16.4ft) Operating temperature -20°C to +55°C (-4°F to +131°F) Storage temperature -30°C to +70°C (-22°F to +158°F) BATTERY 6V Lithium Metal Туре Replacement By service centre Use Logged by microcontroller **OPERATION** Activation Manual two stage Self test (short) Battery use indication GPS Self test (long) SART TEST transmission with GPS position TRANSPORTATION IATA UN 3091, not Air cargo restricted Classification PI970 Section II ELECTRICAL **AIS Transmitter** Frequency AIS channel 1-161,975 MHz, AIS channel 2 - 162.025 MHz Power 2W nominal Sprung whip Transmit antenna

AIS messages Message 1 (UID, GPS position, SOG, COG, transmitted UTC) Message 14 (SART-ACTIVE or SART TEST) Unique ID number Factory programmed **GPS** receiver GPS type 50 channel Antenna type Ceramic patch GPS position update Every minute PHYSICAL Size (D x W x L) 27 x 47 x 124mm (1.1" x 1.6" x 4.7") 120g (4.23 oz) Weight Deployment Hands free Webbing clip Hand held lanyard Security FUNCTIONAL First transmission After 10 seconds (no GPS) 4 nautical miles (typical) Secondary location Flashing white LED device and status indicator **STANDARDS** (App. Parts of) APPLIED IEC 61097-14, 60945 (environmental EMC), 61108 parts 1, ITU-R M.1371 PART NUMBER Safelink R10 SRS K98-001-001A retail pack

Range



Kannad Marine is a brand of McMurdo Ltd, Silver Point, Airport Service Rd, Portsmouth, PO3 5PB, UK

Tel: +44 (0) 23 9262 3900 Fax: +44 (0) 23 9262 3998 Email: sales@kannadmarine.com www.kannadmarine.com

**ISSUE 3** 

September 2011

Please note that all information given in this brochure is intended to be useful and informative and is correct to the best of our knowledge at time of print. No liability can be accepted for inaccuracies or omissions. The right is reserved to amend this information without prior notice.





# SRFELINK

## **AIS Survivor Recovery System**



**NEW** 

† For use with AIS enabled plotters, contact your plotter manufacturer for further info.

The SafeLink R10 SRS (Survivor Recovery System) is the first of its kind, a personal AIS (Automatic Identification System) device designed to be fitted to a lifejacket and assist in survivor recovery. The SafeLink R10 SRS is specifically designed as a personal AIS search and rescue locating device, it enables those on board a vessel with an AIS chart plotter<sup>†</sup> to quickly and efficiently locate and retrieve a missing crew member.


The SafeLink R10 transmits target survivor information, including structured alert messages, GPS position information and a unique serialised identity number back to the onboard plotter<sup>†</sup>. An inbuilt high precision GPS receiver provides accurate position information to assist in quick recovery of survivors.

The SafeLink R10 will transmit continuously for a minimum of 24 hours and has a 7 year battery storage life. It also features a flashing LED indicator light to aid detection at night and a self test facility with battery use indication.

Carrying a SafeLink R10 is a must for every safety-conscious sailor. Using this simple to operate, yet state of the art new device ensures the ultimate chance of survivor recovery.

## How SafeLink R10 SRS works

- R10 SRS is activated manually in an emergency situation
- A unique emergency alert is transmitted to all AIS receivers and AIS enabled chart plotters<sup>†</sup> within a 4 mile radius (typical)
- An AIS SART emergency alert icon (pictured below) signals the requirement for urgent help

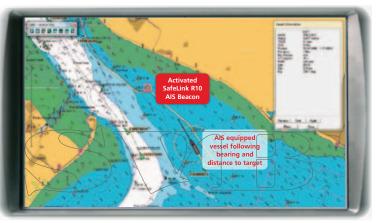

\*Image shown is Euronav Software

- Precise target survivor information including GPS position becomes viewable when the chart plotter<sup>†</sup> cursor is positioned over the emergency alert icon
- Provides exact location, distance and bearing to locate person(s) in need of assistance.

As AIS SARTs are still very new, not all small-craft chart plotters with AIS show the correct SART icon  $\bigotimes$  as recommended by the IMO. At the very least, they will show the same icon as used for other craft – normally an arrow. In addition, user settings generally allow you to configure the display to show the MMSI number, which in the R10 always begins with 970. This way you can differentiate the R10 from other vessels. If in doubt, check with your plotter manufacturer how they display SARTs on screen. All new ECDIS plotters (on ships over 300 tonnes) will display the SART icon  $\bigotimes$  correctly.

For use with AIS enabled plotters, contact your plotter manufacturer for further info.
\* Contact lifejacket manufacturer for further information


### Installation and Activation

The SafeLink R10 SRS can be mounted on a lifejacket using the attachment clips provided, prior to going to sea.

It can be manually activated in two easy steps. First, slide off the orange arming tab. This is normally left in place to avoid accidental activation. With the orange tab released, use this to pull off the red activation cap. This will deploy the antenna and automatically switch ON the R10 SRS.

If professionally\* fitted to a lifejacket, the R10 SRS can become semi-automatic in operation; the action of the lifejacket inflating triggers the activation of the R10 SRS.



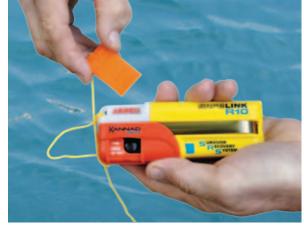

Easy activation - just slide off the orange arming tab, then pull off the red activation cap

